


NY2 Series 《Both Tracks Play the Same Pitch》 Notice

Note: When using NY2 Series to play both tracks with the same pitch, volume of the following specific pitches become less loud:

- ◎NY2A Series: B6.
- ◎NY2B Series: B6.
- ◎NY2C Series: G5, D7.

Cause: When both tracks play the same pitch but not synchronized, it causes offset due to opposite phase.

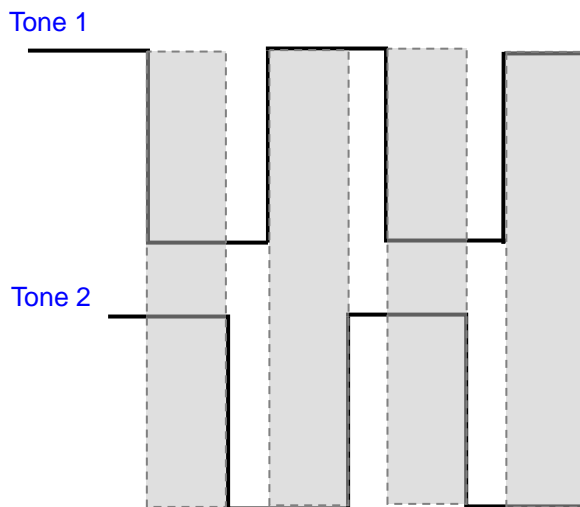

(The gray areas cause offsets due to opposite phase)

- Alternatives:**
1. Rearrange or transpose music to avoid the specific pitch.
 2. Arrange note intervals of track 1 and track 2 as one octave.